




TECHNOPOLYMER replacement table tops

by drake

inserts assembly for M6 screws

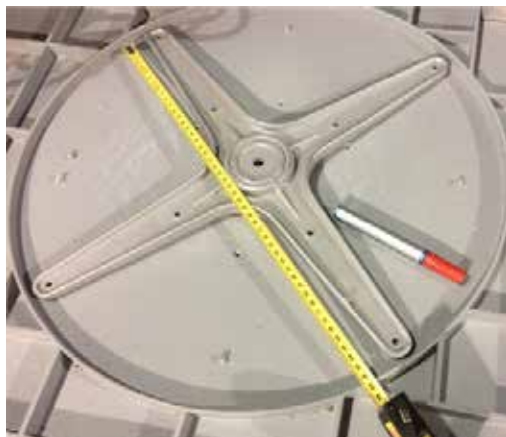

Referencing your existing plate/spider, locate the position of the screws under the new table top. We can assist and take care of this process if provided with a drawing with the interaxis of the holes.



Use a **Ø8mm (5/16")** drill bit with a **collar** set to make a **pre-hole 10mm (3/8")** deep.



Using a 6mm allen key, drive the **inserts** into the table top holes made previously **without over-tightening** (set your powertool on **LOWER TORQUE** if using a power tool).



Using M6 screws, attach the leg plate/spider to the table top to finish the assembly...

Enjoy your new table top!!!