



TECHNOPOLYMER
replacement
table tops
by drake
K-Plates Assembly



Use a **Ø3mm (1/8")** drill bit with a **collar** set to make a **pre-hole 10mm (3/8")** deep for the 6 screws holding the k-plate.

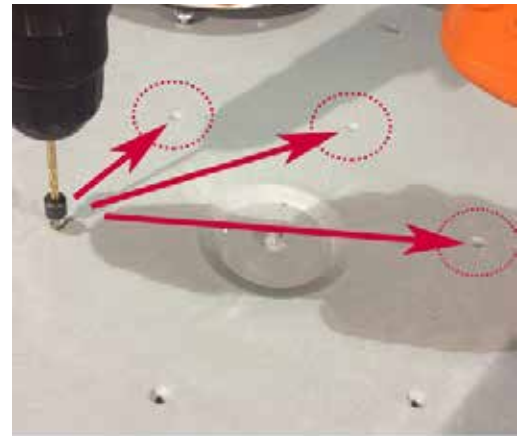

The position of the 6 holes for the screws of the k-plate is clearly marked under the table top. The collar on the drill bit should be set at **10mm (3/8")** from the tip of the bit.

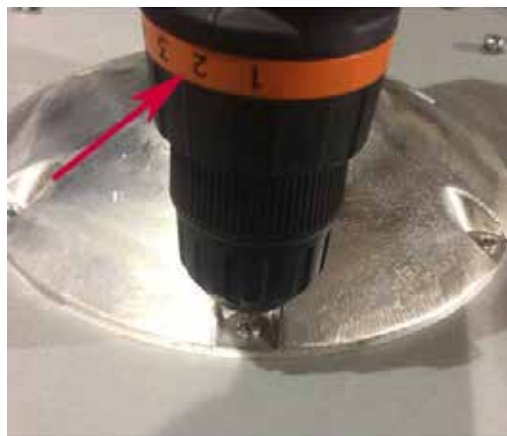

Attach the **k-plate** driving the **6 wood screws Ø4mmx12mm (#8x1/2"L)** into the table top **without over-tightening** (set your power-tool on **LOW TORQUE** if using a power tool). Screw size can be increased all the way up to **Ø6 mm (1/4"Ø)**.



**That's it...
Enjoy your new table top!!!**